

PXR-RNMWSK

Scramble Keypad Reader



Features

- Provides Wiegand & RS-485 communication interfaces for more flexible applications.
- In standby mode, touch any keys or swipe a card to have the numeric keys 0~9 randomly displayed. (The lower-left key and lower-right key are fixed to be "C" and "E" respectively)
- Only the user standing in front of the reader can see the random digits ; No more worries about entered code detected by onlookers.
- Provide Wiegand 34 as the default format; Other Wiegand formats are available by setting.
- Conforms to ISO 14443A, supporting MIFARE card.
- Unique ID or Block read format supported and programmable key value.
- Case sensor detection function to enhance the system security.
- Wide range of operating temperature to meet the requirements of tropical or frigid zone climate environment.
- Watchdog function secures system free from halting.


Ordering Information

Package Content:

- PXR-RNMWSK x 1
- Accessory Pack x 1
- Quick Start Guide x 1
- Plate x 1

Model No. Identification

P X R - R N M W S K

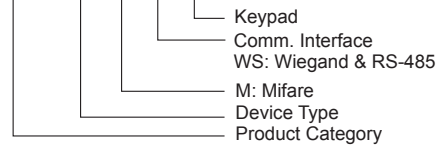

Color

- Black (BL)

Specifications

Model No.	PXR-RNMWSK
Read Format	Mifare (13.56 MHz)
Read Range	3 cm
Comm. Interface	Wiegand & RS-485
Keypad	12 Keys (0-9, C, E) ; Illuminated keys
Input Port	Case Sensor x 1
ID Setting	DIP switch
Comm. Baudrate	19,200 bps-N-8-1
LED Indicator	Green / Red Bi-color LED x 1 (Status / Power)
Beep Tone	Buzzer
Power Input	DC 9~17V
Current Consumption	300mA (max)
Operating Temp.	-20°C~ 70°C / -4°F~ 158°F
Relative Humidity	20% ~ 80%(Non-condensing)
Dimensions (mm)	122 (L) x 88 (W) x 28 (H)